


Resetting Chromebooks

Steps for removing your account from a Chromebook.

Sign in as normal go to your Gmail


Step: 1

Click on **Manage account**

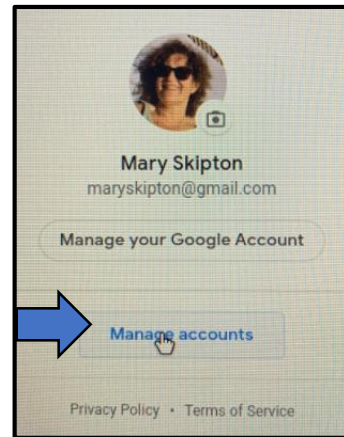


Step: 2

Click **Advanced**

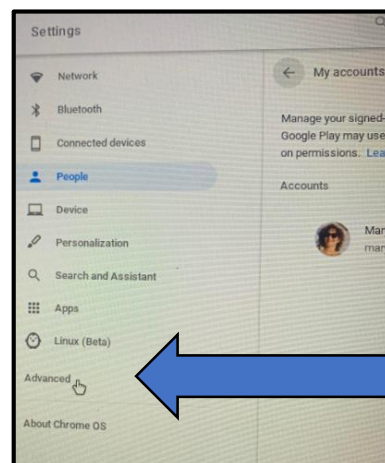

Step: 3


Scroll down - Click **Reset settings**

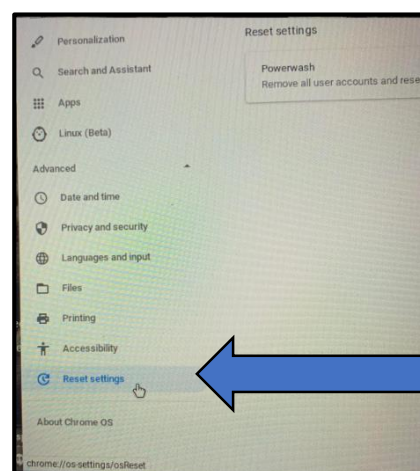

Step: 4


Powerwash

Remove all user accounts and reset your Google Chrome device to be just like new

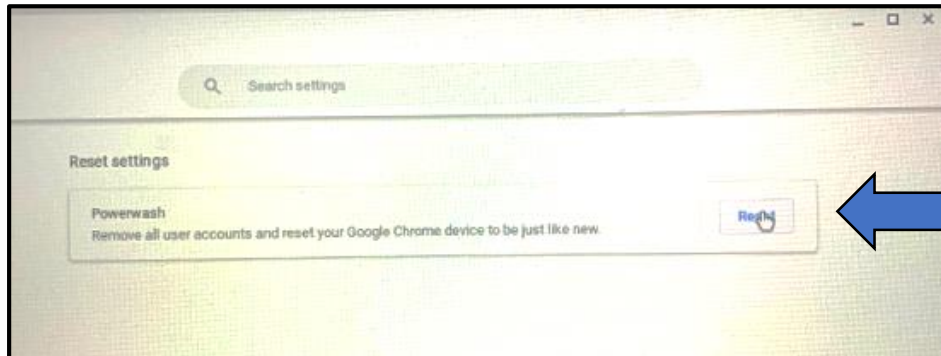


Click **Reset**

Step: 5

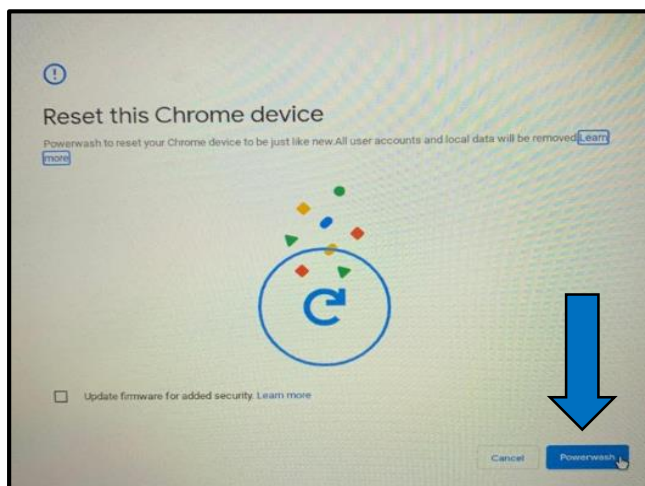

Click **Powerwash**

Step: 6

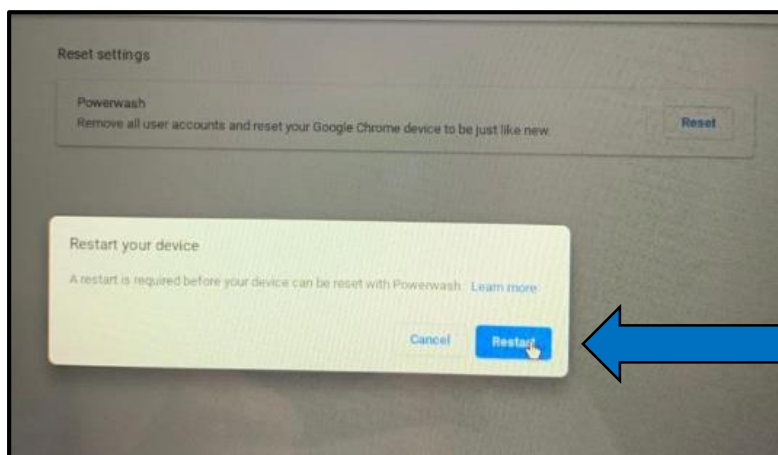

Click **Restart**